 


LifeFitness

ARCTIC SILVER 90C Upright Bike

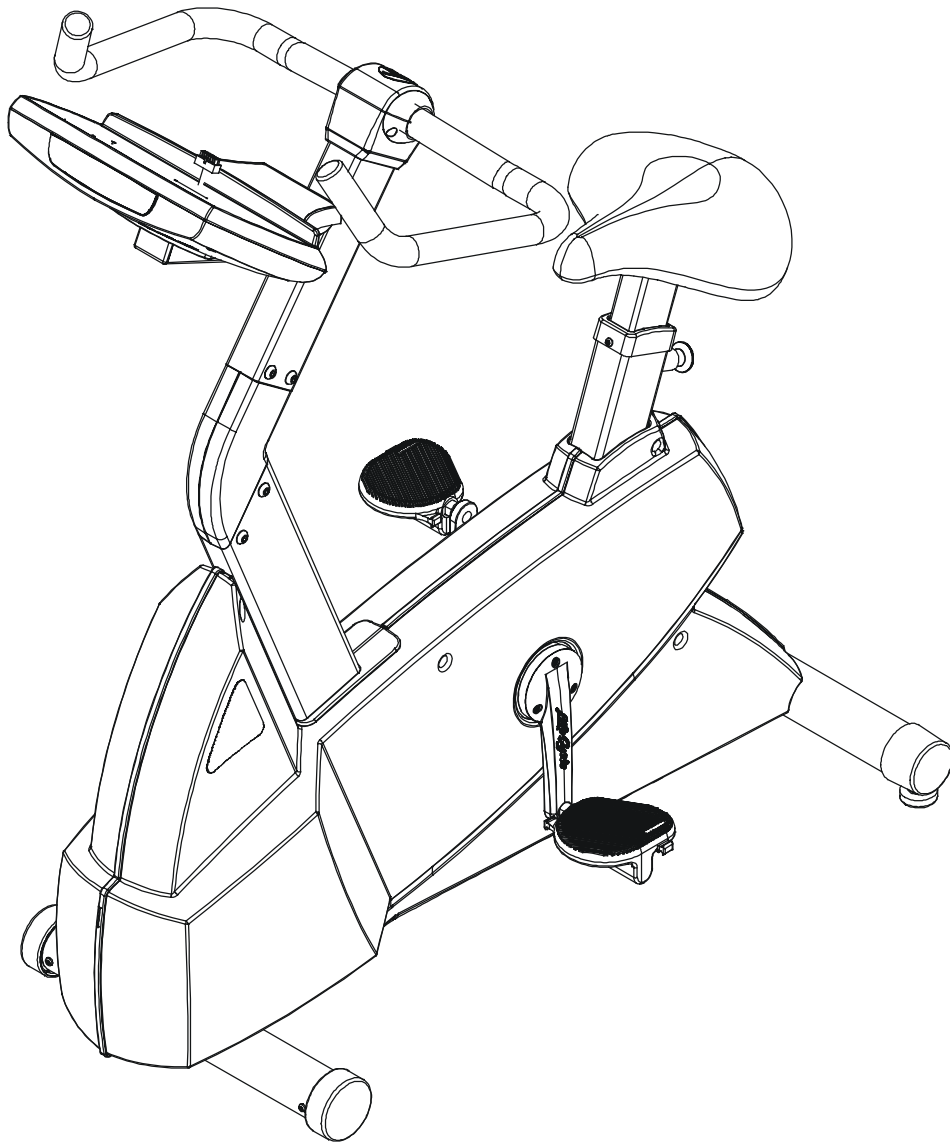

Customer Support Services
PARTS MANUAL

ARCTIC SILVER 90C
REFERENCES

90C-0XXX-02
S/N CCH100000 and UP

OPERATION MANUAL	M051-00K63-A068
ACCESSORY TRAY	GK63-00002-0004
HARDWARE BAG	GK63-00002-0044
POLAR UPGRADE KIT	GK63-00002-0002
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K63-A009


ARCTIC SILVER 90C
CONTENTS

90C-0XXX-02
S/N CCH100000 and UP

	Page
CONSOLE COMPONENTS	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS.....	5
ALTERNATOR W/PULLEY	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS.....	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY.....	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY.....	18
HANDLEBAR ASSEMBLY.....	19
BELTS.....	20
CABLES.....	21

ARCTIC SILVER 90C
Console Components

 90C-0XXX-02
S/N CCH100000 and UP

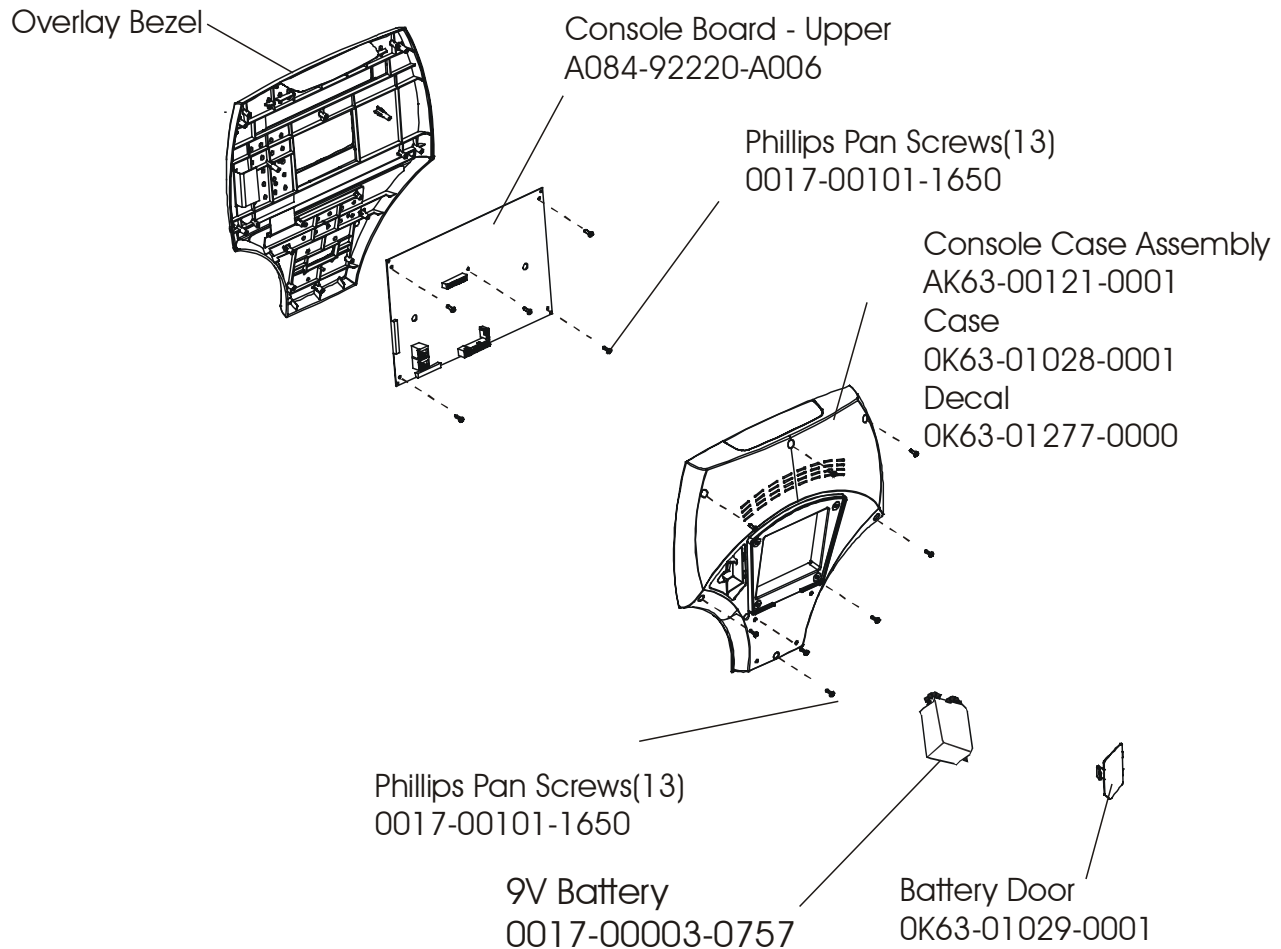


Console Assembly	Bezel W/Overlay Assy.
AK63-00162-0001 Eng Met	AK63-00167-0001 Eng Met
AK63-00162-0003 Ger Met	AK63-00167-0003 Ger Met
AK63-00162-0004 Spn Met	AK63-00167-0004 Spn Met
AK63-00162-0006 Jap Met	AK63-00167-0006 Jap Met
AK63-00162-0007 Frn Met	AK63-00167-0007 Frn Met
AK63-00162-0008 Itl Met	AK63-00167-0008 Itl Met
AK63-00162-0009 Dut Met	AK63-00167-0009 Dut Met
AK63-00162-0010 Por Met	AK63-00167-0010 Por Met

ARCTIC SILVER 90C

Console Screws & Polar Covers

90C-0XXX-02

 S/N CCH100000 and UP

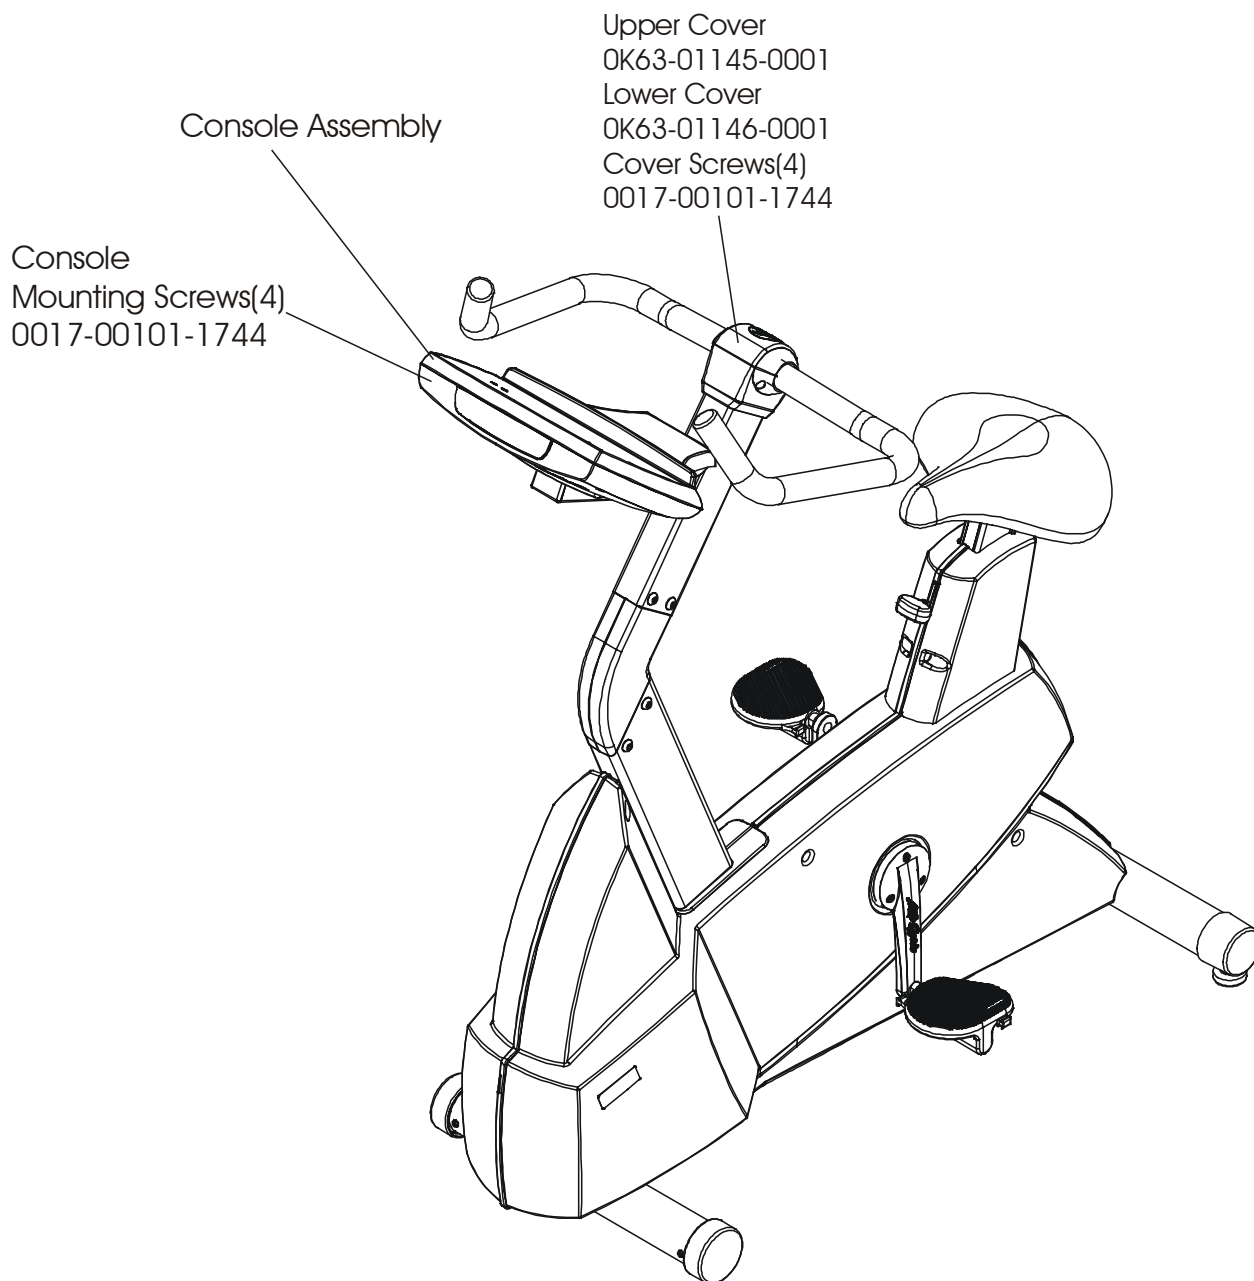


ARCTIC SILVER 90C

90C-0XXX-02


Alternator w/Pulley - AK63-00093-0000

 S/N CCH100000 and UP

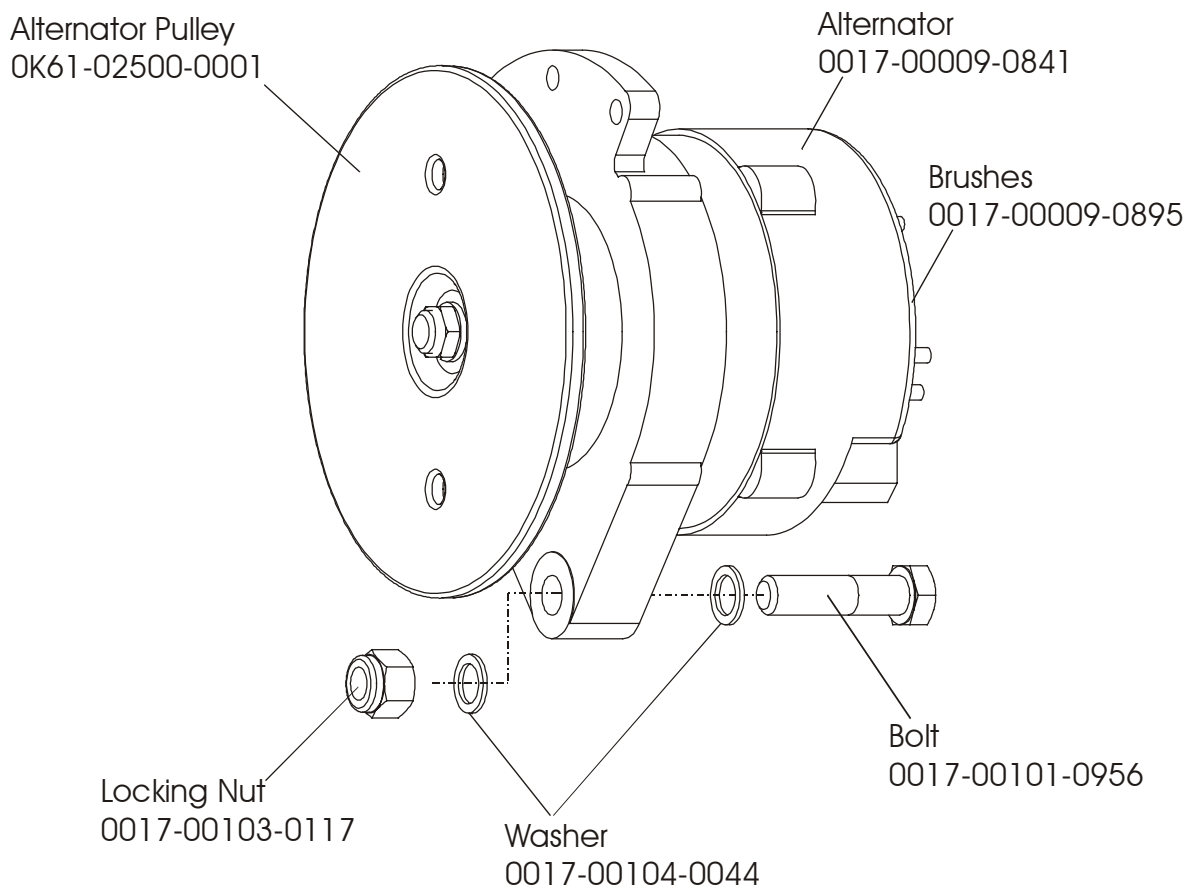

ARCTIC SILVER 90C
Crankshaft and Bearing Assembly

 90C-0XXX-02
S/N CCH100000 and UP

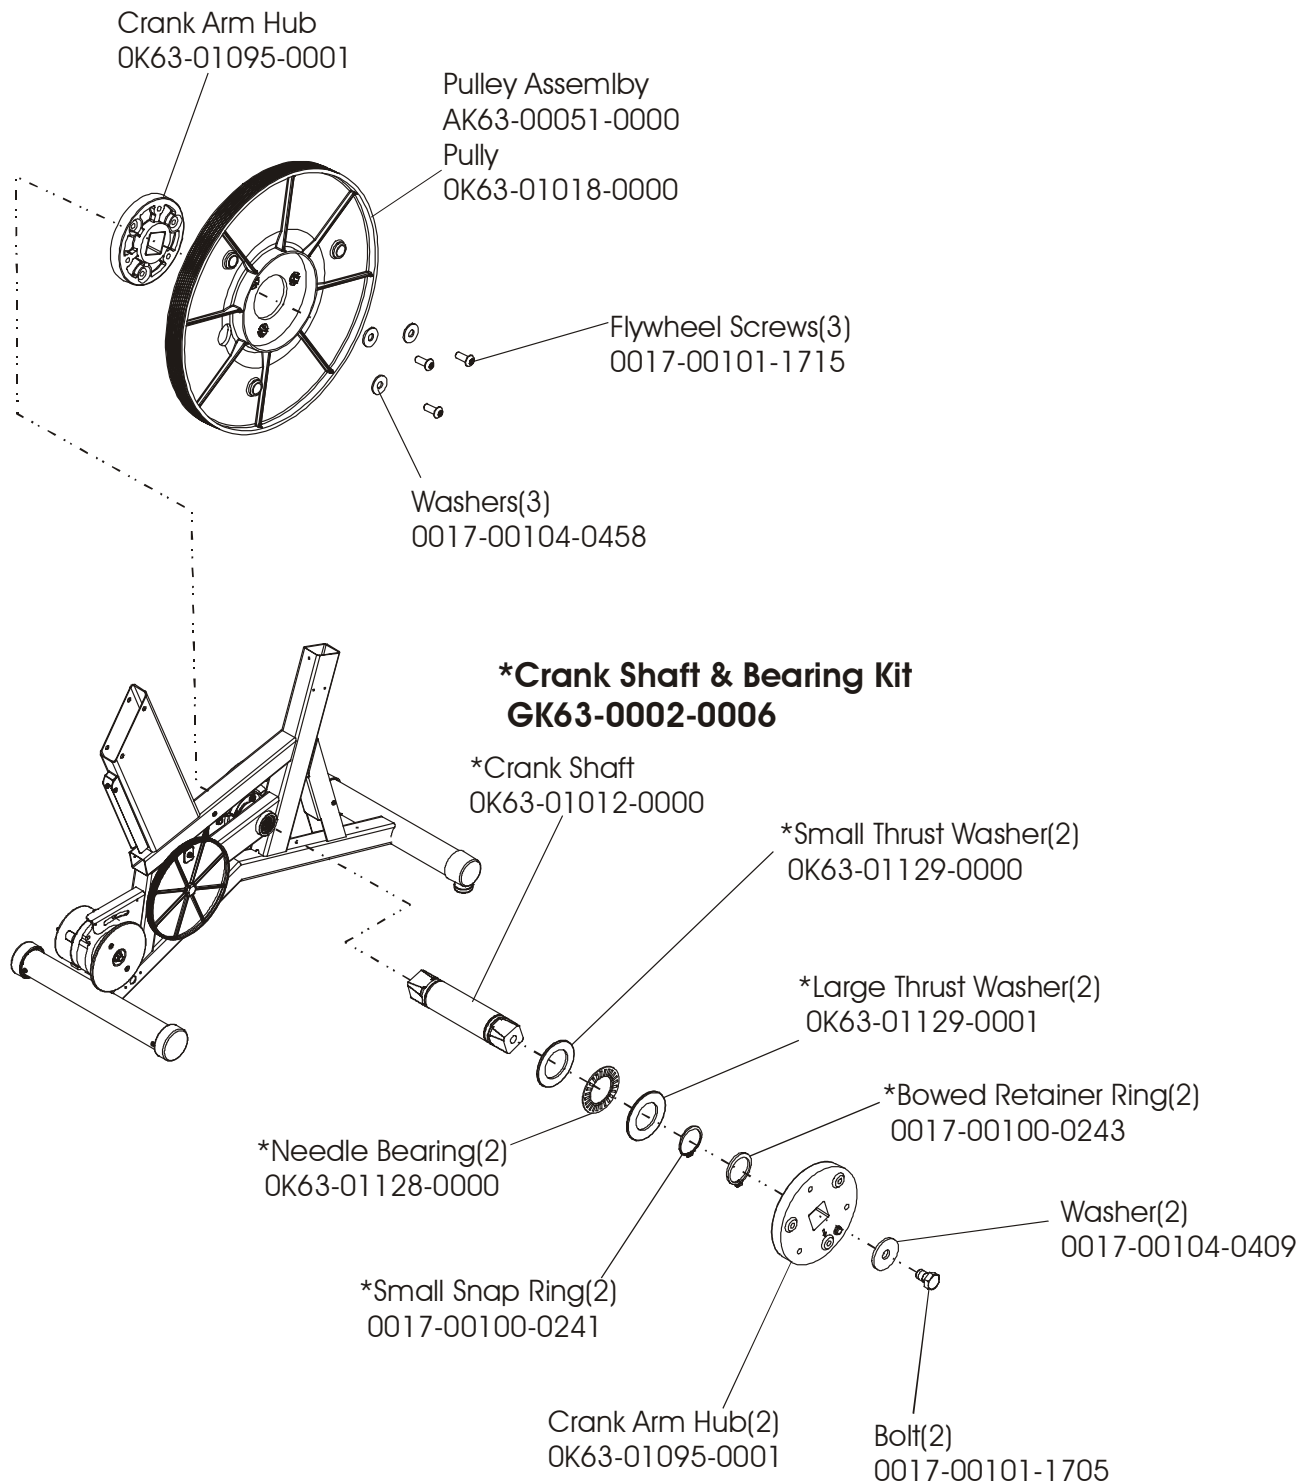


ARCTIC SILVER 90C

Intermediate Shaft & Bearing Assembly

90C-0XXX-02

S/N CCH100000 and UP

 Kit number – GK63-00002-0007

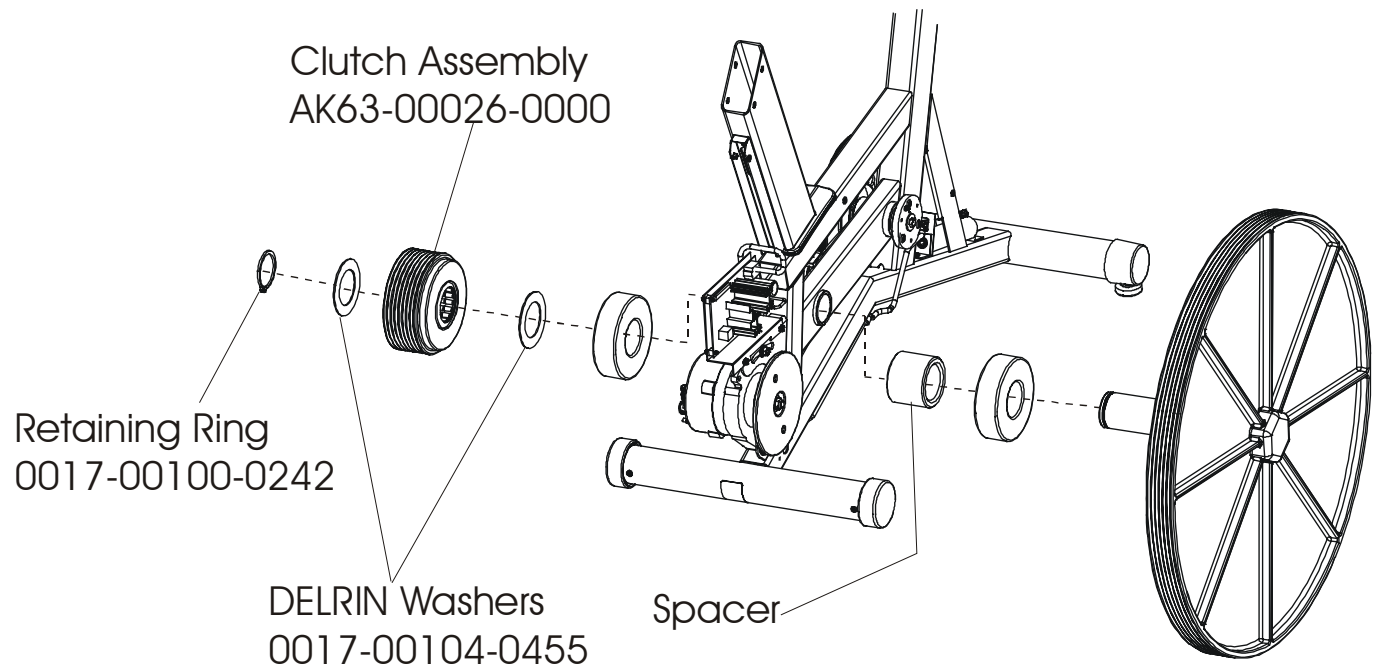


ARCTIC SILVER 90C

Seat Latch Assembly - AK63-00043-0001

90W-0XXX-02

 S/N CCH100000 and UP

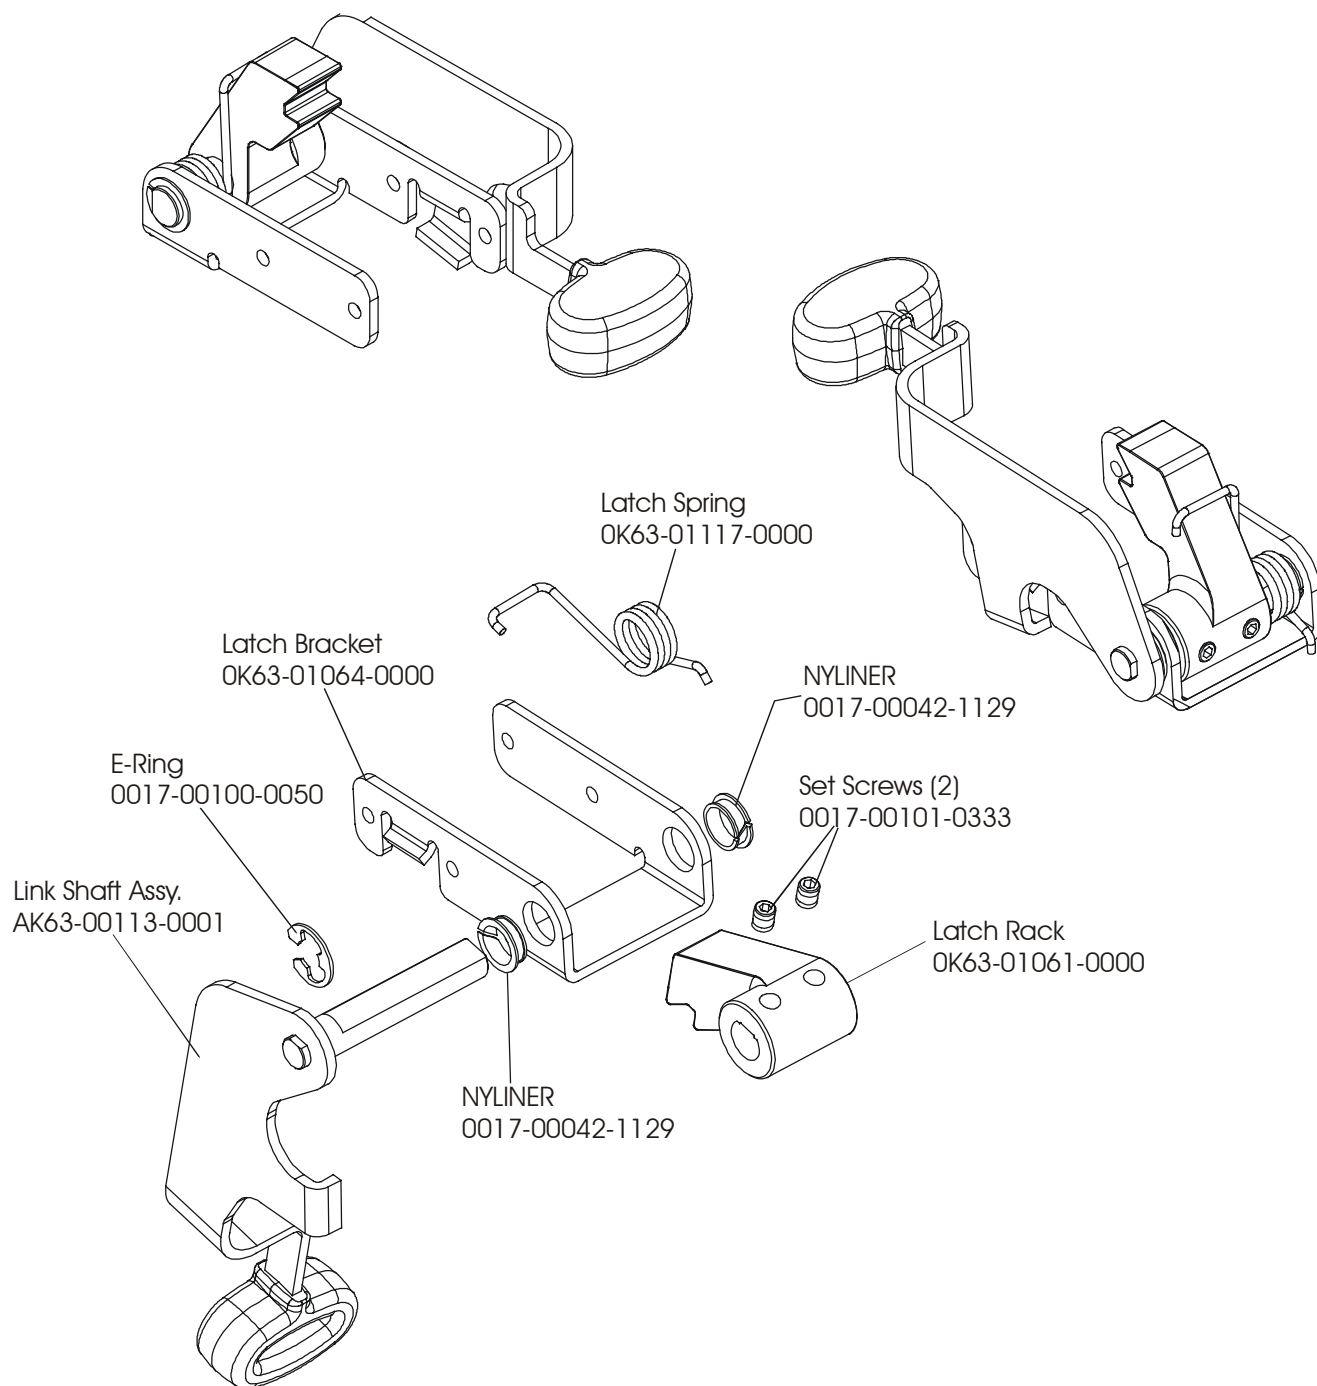


ARCTIC SILVER 90C

Seat Post Assembly – AK63-00232-0003

90C-0XXX-02

 S/N CCH100000 and UP


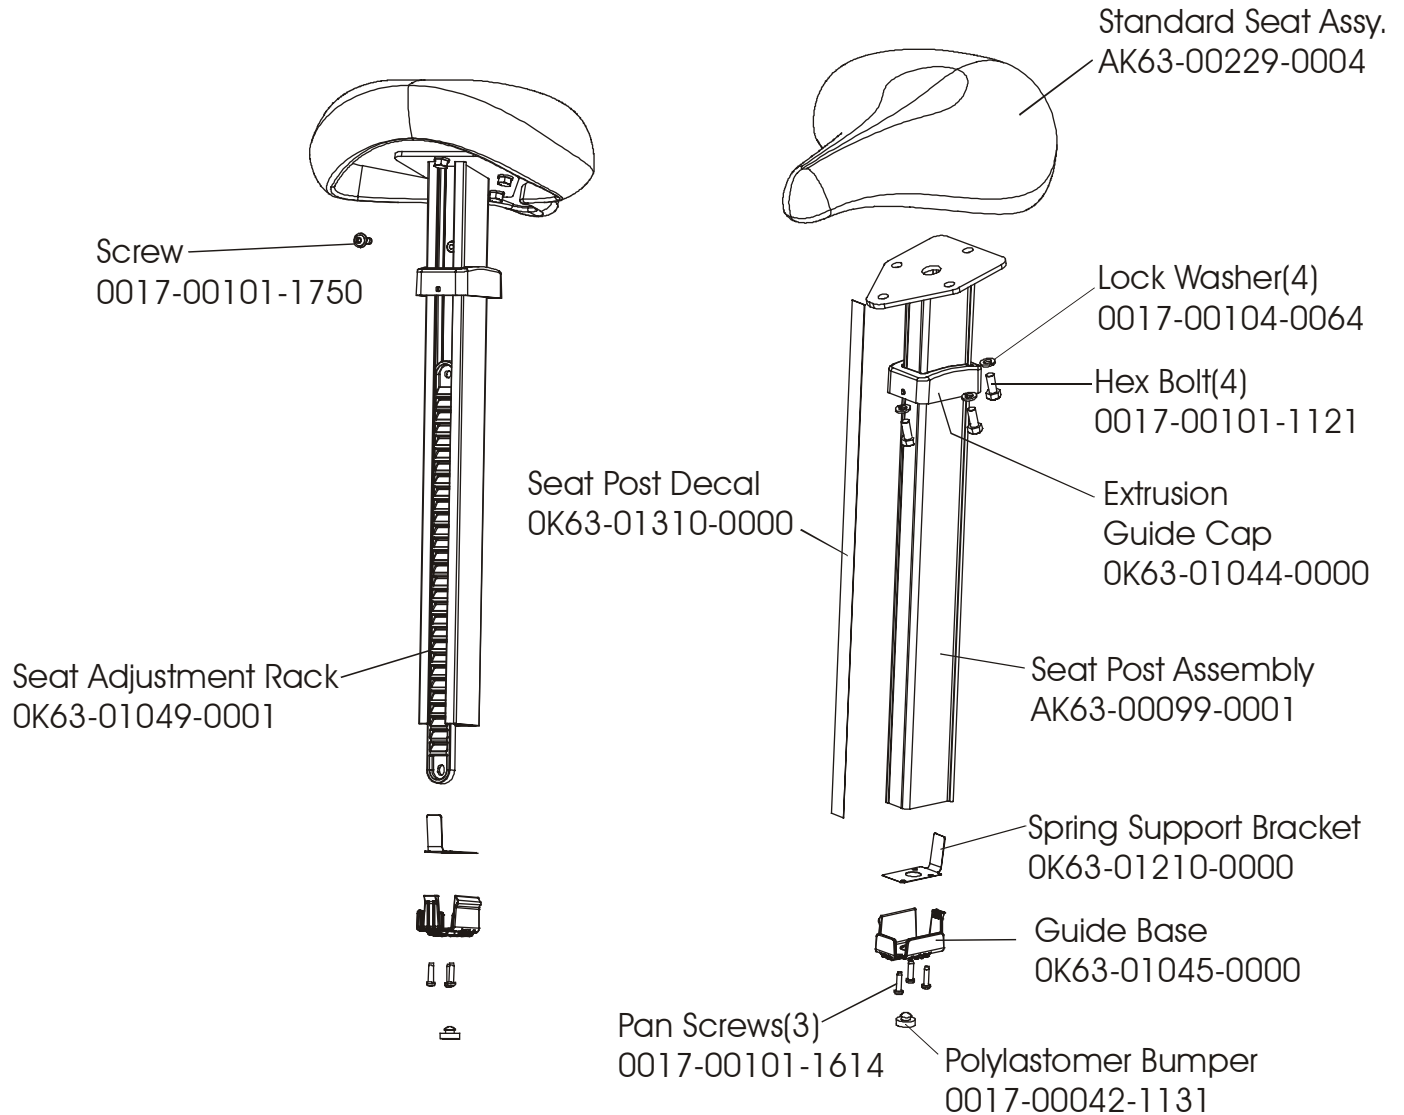


ARCTIC SILVER 90C
Seat Post Shrouds

90C-0XXX-02
S/N CCH100000 and UP

Left Seat Post Shroud
OK63-01092-0010

  Screw
0017-00101-1741

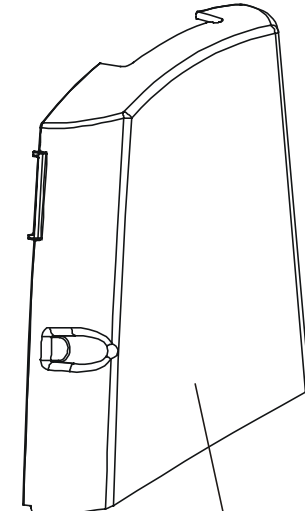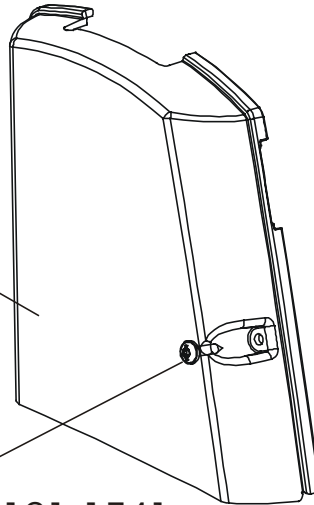


Right Seat Post Shroud
OK63-01092-0009

ARCTIC SILVER 90C

90C-0XXX-02


Idler Bracket Assembly - AK63-00021-0000

 S/N CCH100000 and UP

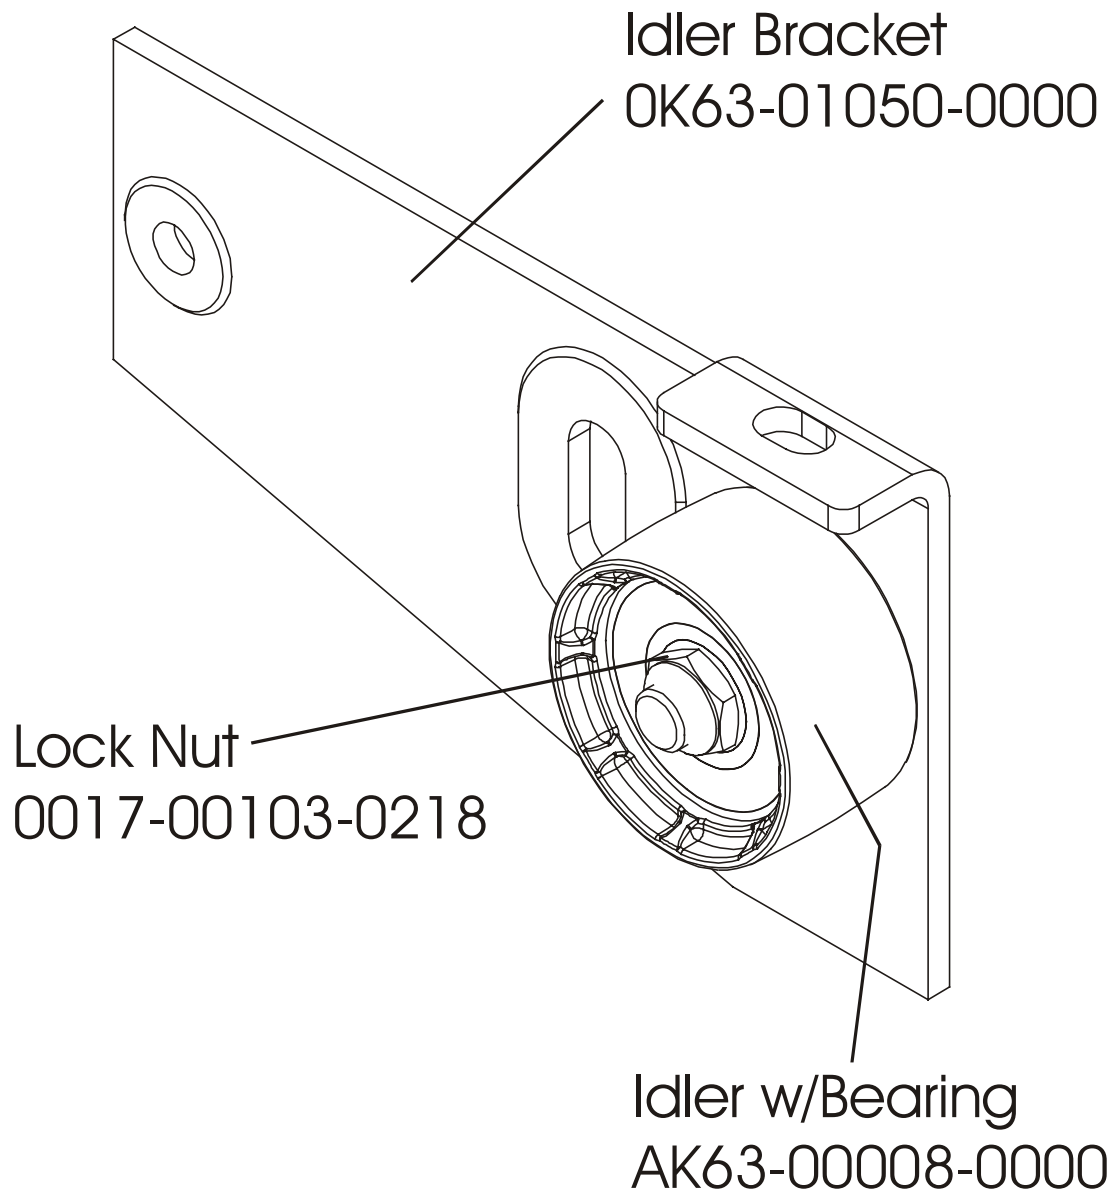

ARCTIC SILVER 90C
Console Support Assembly

 90C-0XXX-02
S/N CCH100000 and UP

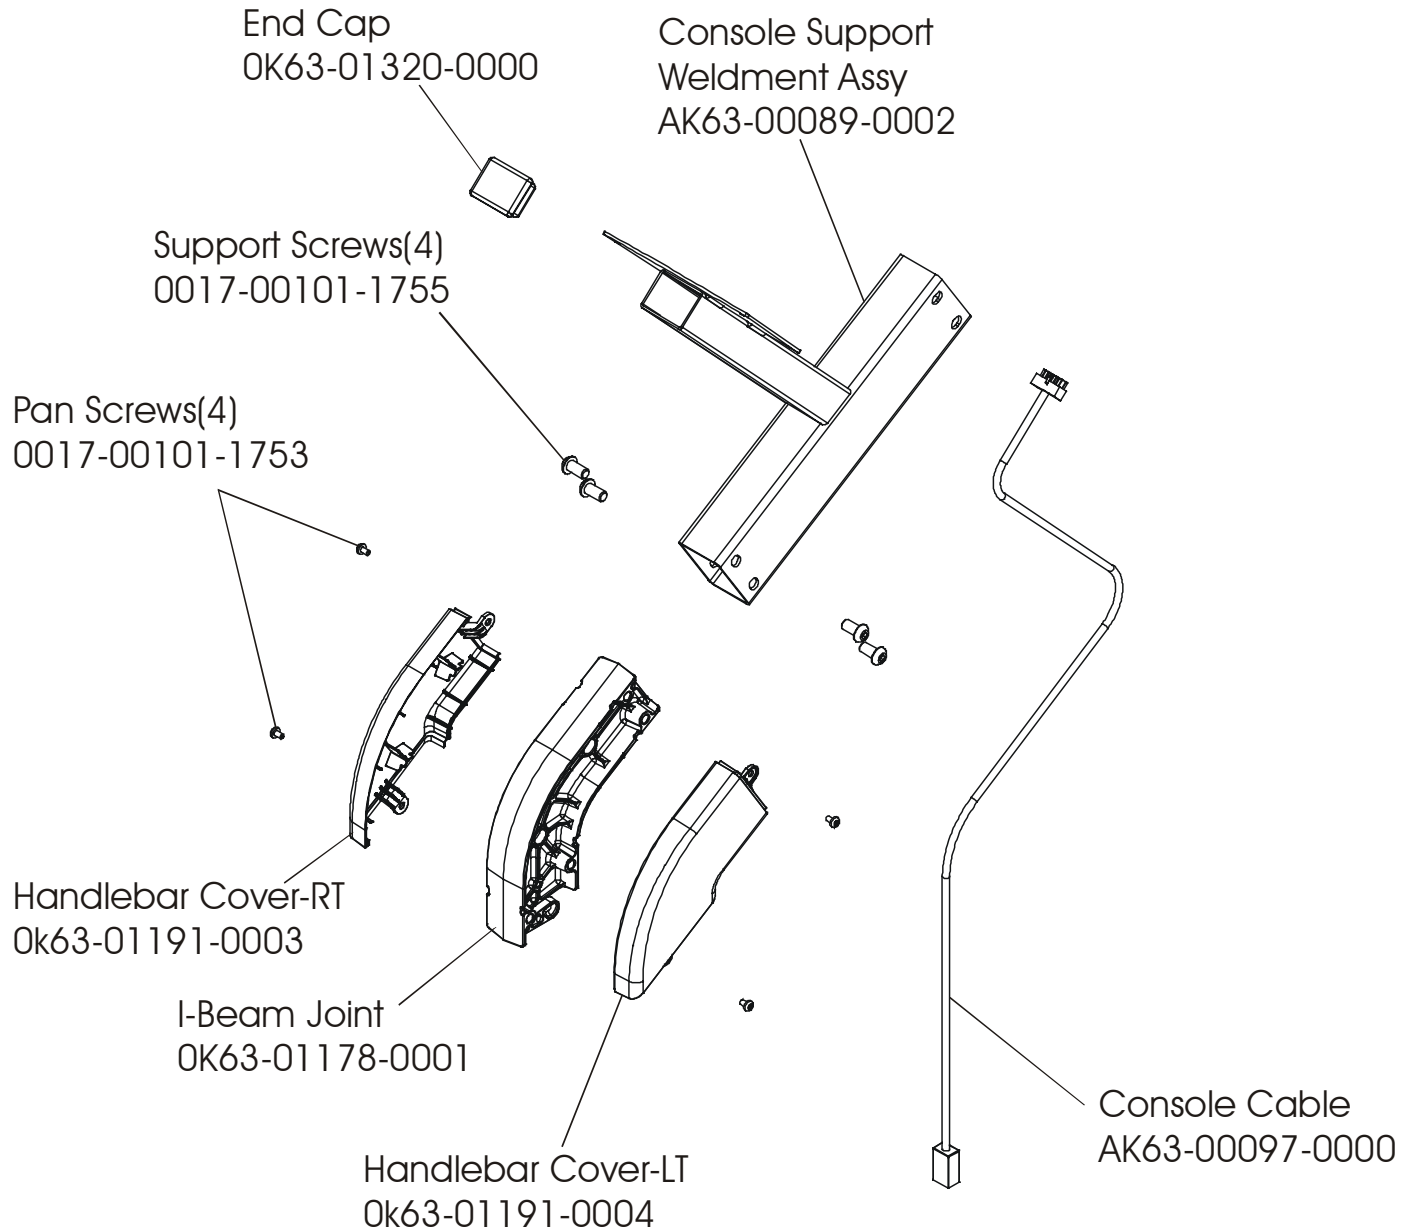


ARCTIC SILVER 90C

Left Side Shroud and Crankarm

90C-0XXX-02

 S/N CCH100000 and UP

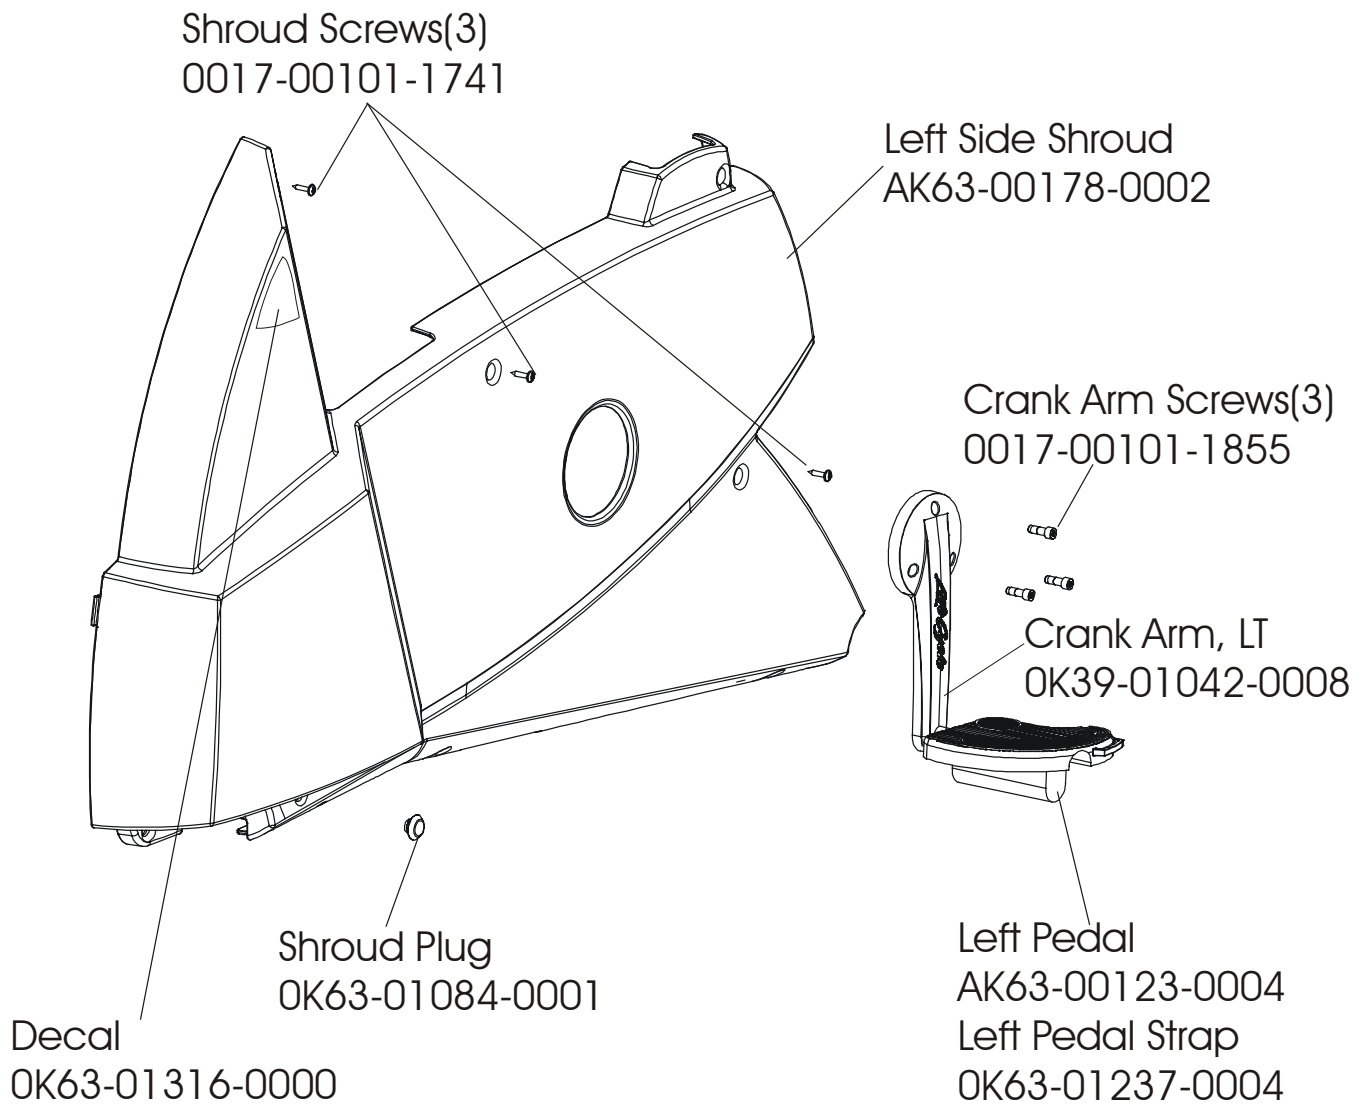


ARCTIC SILVER 90C

Right Side Shroud and Crankarm

90C-0XXX-02

 
S/N CCH100000 and UP

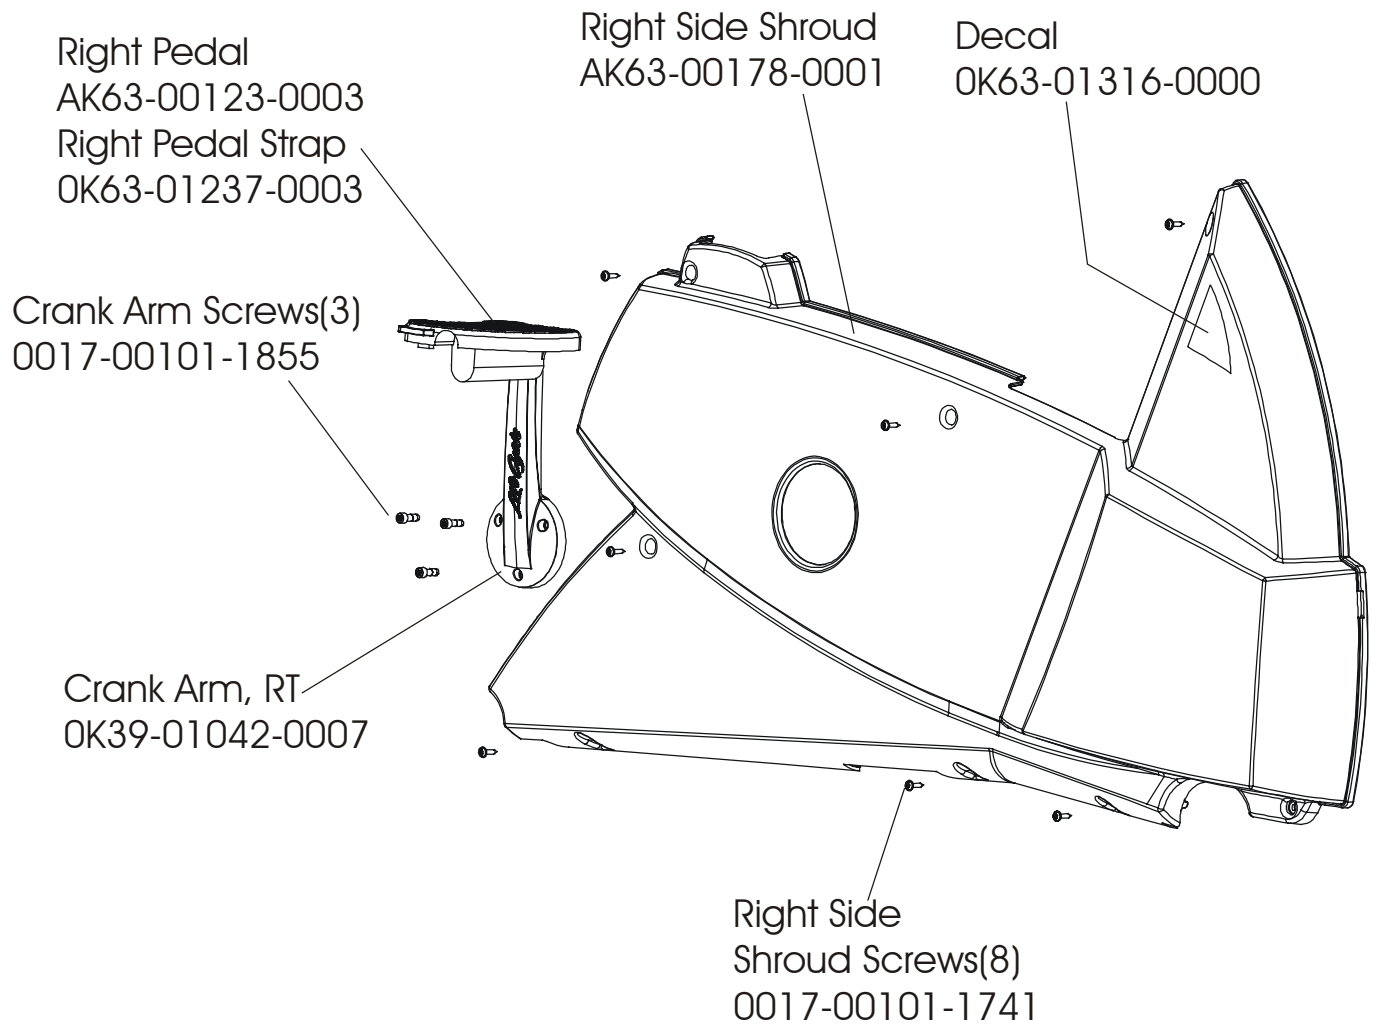

ARCTIC SILVER 90C
PCB Mounting Bracket Assembly

90C-0XXX-02
S/N CCH100000 and UP

 Assembly Number – AK63-00094-0000

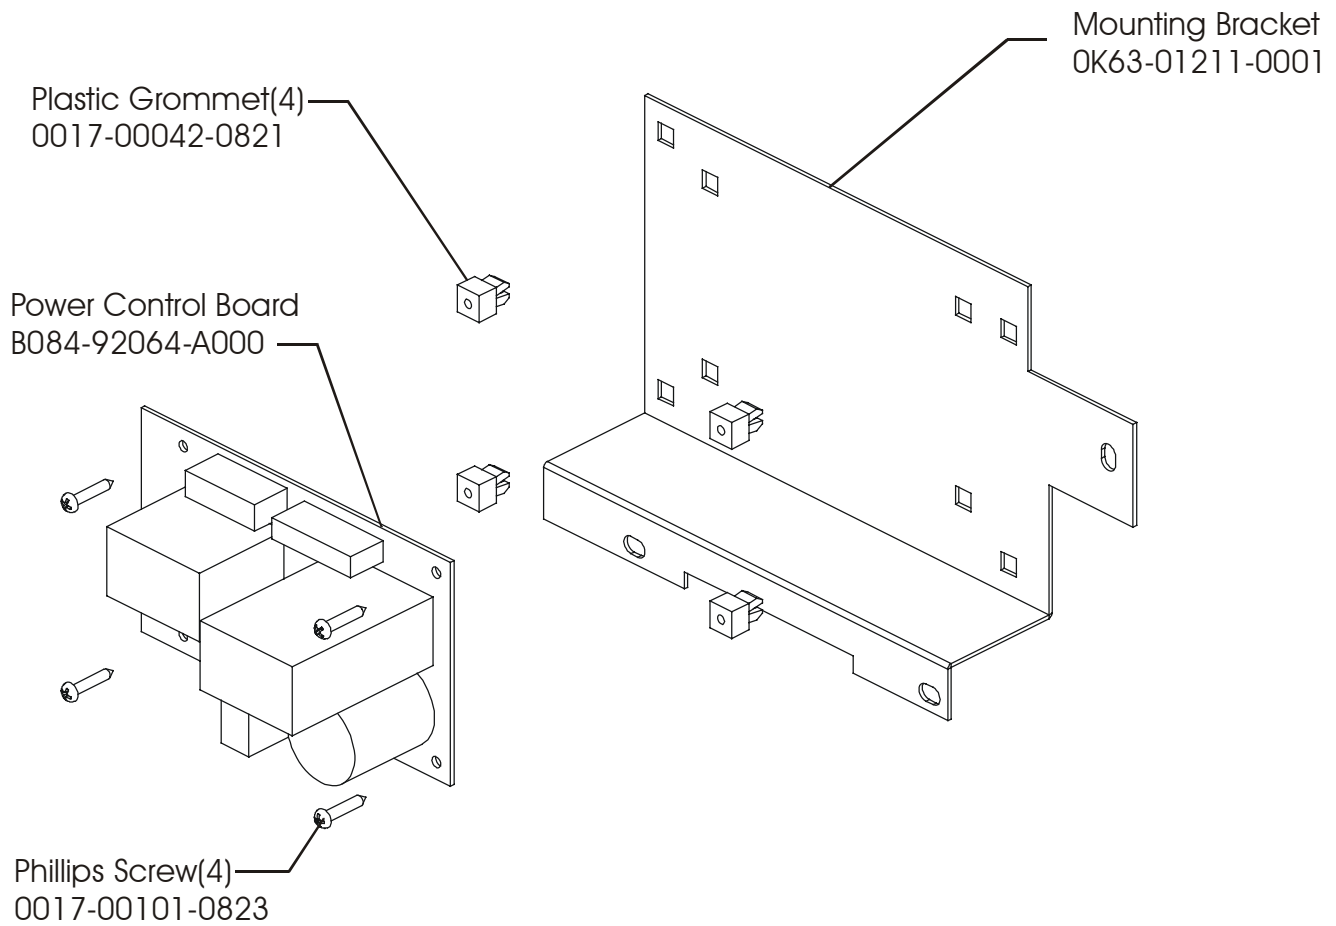


ARCTIC SILVER 90C

Front Wheels – AK63-00017-0001

90C-0XXX-02

 S/N CC100000 and UP

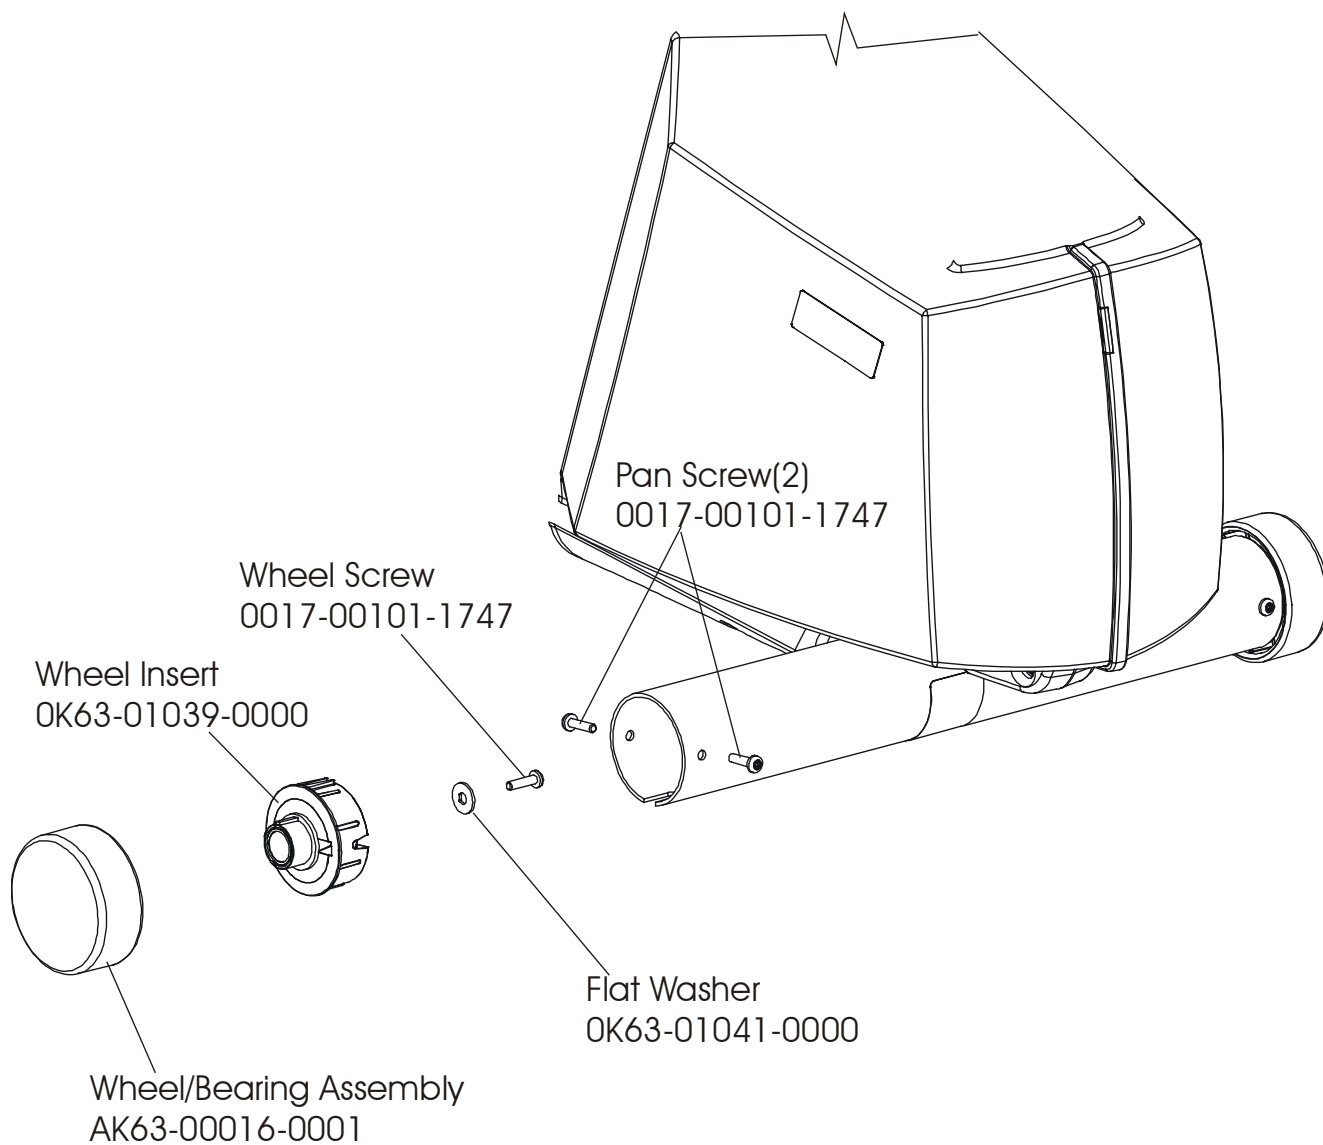


ARCTIC SILVER 90C

Resistor Assembly - AK63-00114-0000

90C-0XXX-02

 S/N CCH100000 and UP

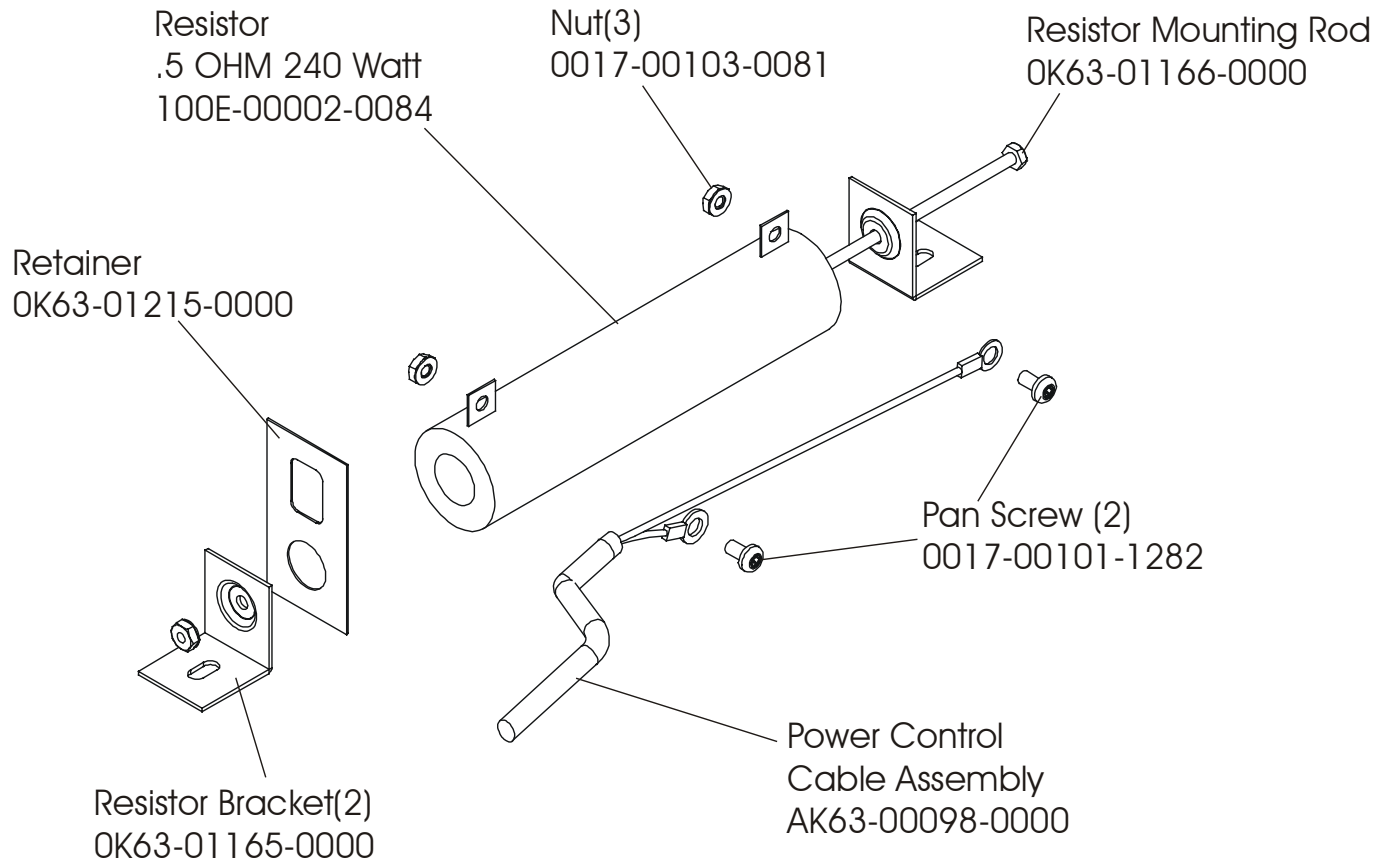


ARCTIC SILVER 90C

90C-0XXX-02

Handlebar Assembly - AK63-00101-0001

 S/N CCH100000 and UP

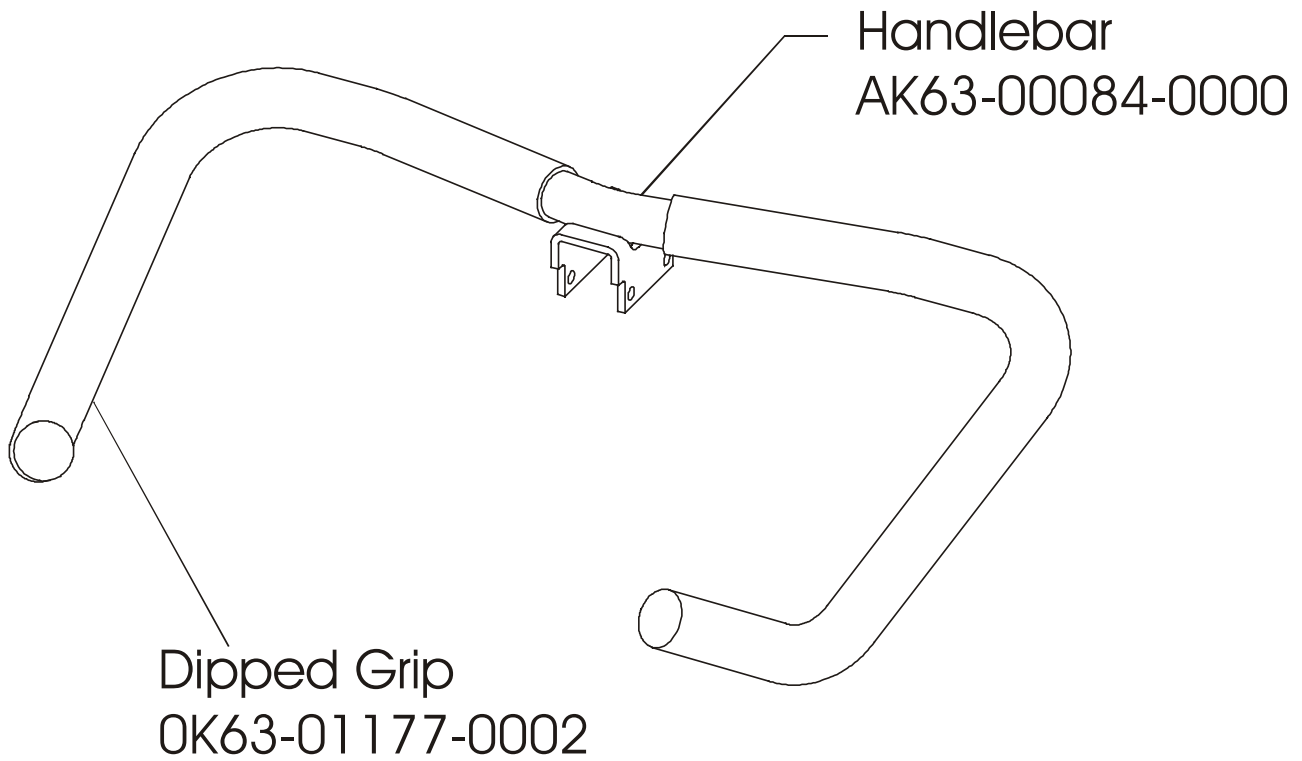


ARCTIC SILVER 90C


Belts

90C-0XXX-02

 S/N CCH100000 and UP

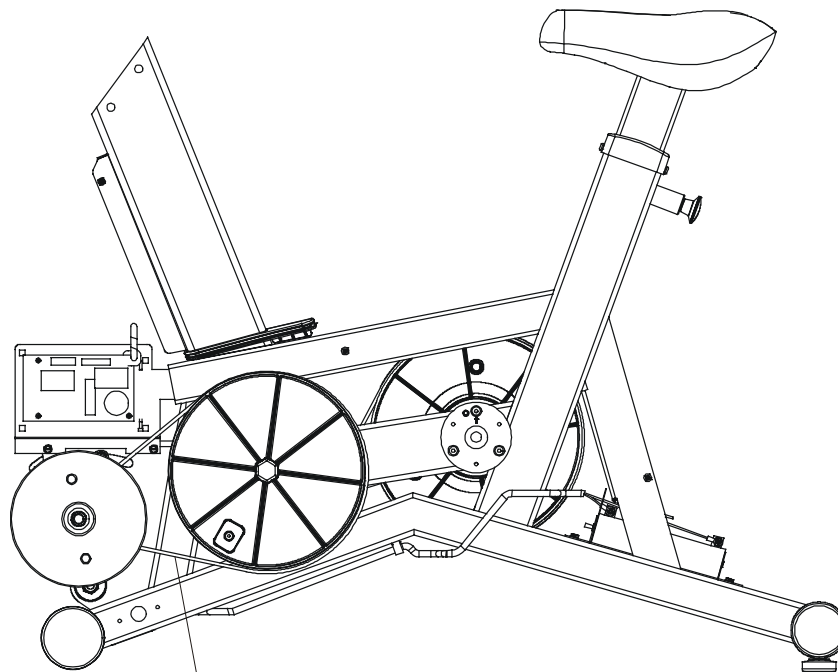

Alternator Belt
OK63-01065-0000

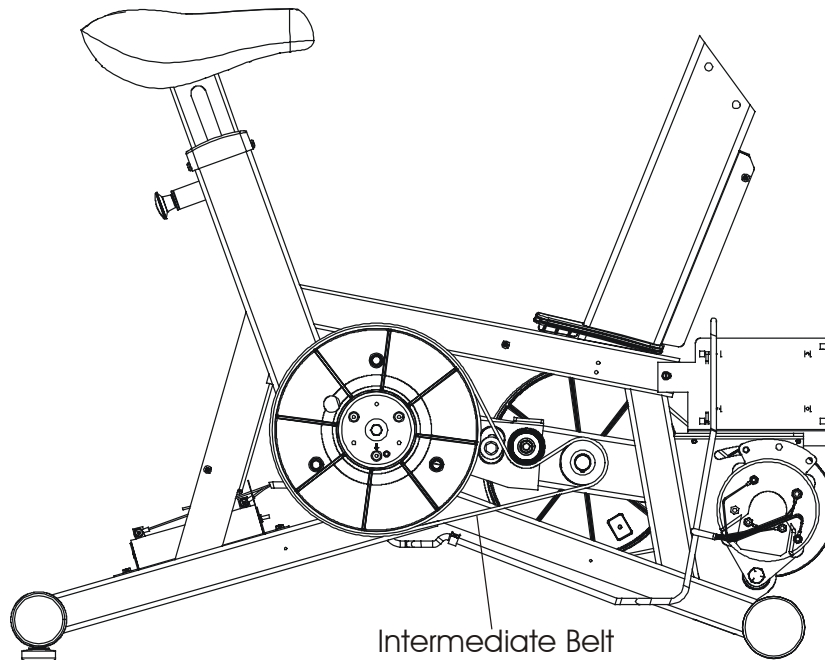 

Intermediate Belt
OK63-01066-0001

ARCTIC SILVER 90C

Cables

90C-0XXX-02
S/N CCH100000 and UP

